


## INSTALLATION INSTRUCTIONS

Switch furnished assembled. Exploded assembly shown for reference.

Back-Up Alarms should be listed on the daily maintenance report. The units on operating vehicles must be tested each day prior to the vehicle's operation. A record of this test is to be recorded in the

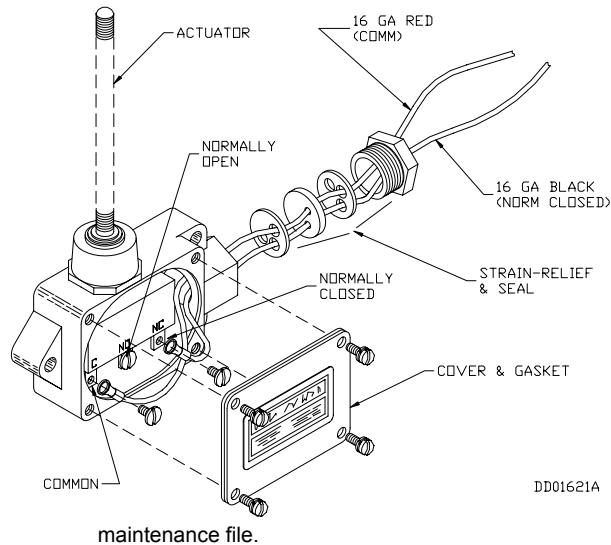


- Select a convenient location for mounting the switch, either at the reverse gear linkage or shift lever, so the outer end of the switch actuating arm will be moved a minimum of one inch when the vehicle is put into reverse. Contact with the actuating arm should be made approximately 1-1/2 inches from the end.
- Feed wires or cable to this location. One of the leads from a terminal of the Back-Up Alarm and the other from a good source of vehicle power.
- Connect Back-Up Alarm wire to the black switch lead, "normally closed (NC)", and the power wire to the switch red lead, "common (COM)".
- Install the switch on the vehicle in the desired position.
- Check Back-Up Alarm system for proper operation before using vehicle.

## INSTALLATION INSTRUCTIONS

Switch furnished assembled. Exploded assembly shown for reference.

Back-Up Alarms should be listed on the daily maintenance report. The units on operating vehicles must be tested each day prior to the vehicle's operation. A record of this test is to be recorded in the maintenance file.

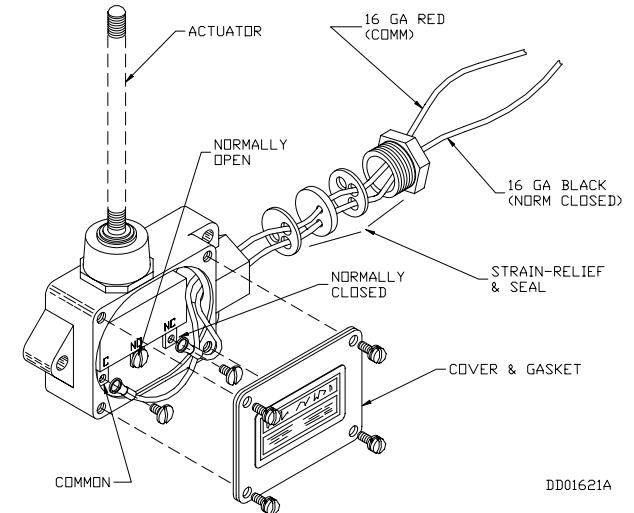

- Select a convenient location for mounting the switch, either at the reverse gear linkage or shift lever, so the outer end of the switch actuating arm will be moved a minimum of one inch when the vehicle is put into reverse. Contact with the actuating arm should be made approximately 1-1/2 inches from the end.
- Feed wires or cable to this location. One of the leads from a terminal of the Back-Up Alarm and the other from a good source of vehicle power.
- Connect Back-Up Alarm wire to the black switch lead, "normally closed (NC)", and the power wire to the switch red lead, "common (COM)".
- Install the switch on the vehicle in the desired position.
- Check Back-Up Alarm system for proper operation before using vehicle.